

 
Aluminum Baseboard Replacement Cover

## Revitalize your Aging Hydronic Baseboard!

## Before You Order: Measure and Preparation

Important to wear safety glasses and gloves before removing old front panel, damper and accessories.

- 1 Remove existing baseboard End Caps and Inside Corner Pieces. (Figure 1).
- 2. Measure Front Panel Cover from top to floor, top to bottom of element, and end to end wth a tape measure. (Figures 2, 3)
- 3. Remove the old baseboard Front Panel Cover by lifting from the bottom to unhook from the bracket. Remove damper by either sliding off from open end or by holding at each bracket point and snapping off from the pivot. (Figures 4, 5).



All of the other accessories are installed without tools by placing them over the Revital/Line Cover, once in place. When more than one cover is used, the seam between the covers can be hidden by using one of the filler sleeves (2", 4", 7" or 14"). All accessories sold separately.

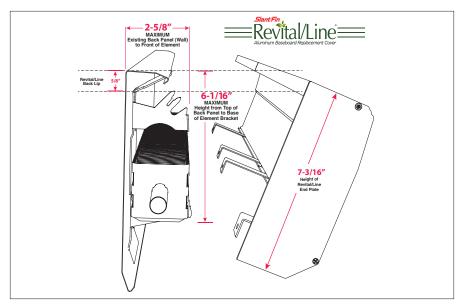




Figure 1





Figure 2

Figure 3



Figure 4



Figure 5



Figure 6


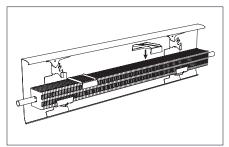


Figure 7

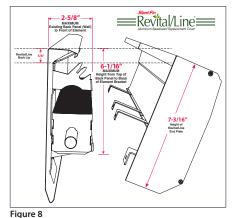

riguico

- 5. If the old baseboard cover length is a different size from a standard length Revital/Line Cover, install the standard length Revital/Line Cover sections together until you get the same length as the old baseboard cover. If you need additional length, you can add a 2", 4", 7" or 14" filler sleeve. Since the filler sleeves are telescoping, they will fill in less than their dimension size. Other accessories are available to finish your installation (Figure 6).
- 6. You may need to loosen the old baseboard from the wall in order to slip the Revital/Line Cover behind it by loosening the screws that hold the old back panel onto the wall. If the existing back panel is sealed to the wall by paint, the seal to the wall can be broken with putty knife or similar tool.
- 7. If you are installing Revital/Line with an existing back panel, including the heating element, simply use the plastic wall spacers supplied by placing them over the element as shown in (Figure 7). (Not supplied with Revital/Line XL).
- **8.** When using support Brackets, position new assembled cover with wall brackets below piping, then lift into place so that top lip of new Cover goes behind back panel of the old baseboard. (See Figure 8).
- Care should be exercised to insure that it isn't scratched or damaged while pressing it into place behind old baseboard back panel. Join covers, as described in step 4.

Attach accessories chosen to Revital/Line Cover, as in step 4. For added support, attach brackets with SPX #10 self-drilling screws provided into the old baseboard back panel using an electric drill with a 5/16" Hex Head Bit. (See Figure 9).

Metal brackets are needed only when existing cover has no heating element. Use the metal wall Support Brackets supplied with Revital/Line by sliding brackets into bottom slot of Revital/Line Cover until they are in the position desired to space the Revital/Line Cover from the wall. See below for quantities of spacers and brackets included.

Revital/Line Cover length: 2' to 3' 4' to 5' 6' to 8' Plastic Spacers & Support Bracket Quantity: 2 3 4

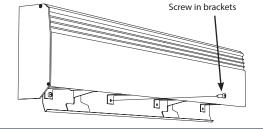


Figure 9

## Accessories



End Cap 2" & 4" (Right & Left)



Inside Corner



Outside Corner 90° & 135°



Filler Sleeve



End Plate (Reversible)



260 North Elm Street Westfield, MA 01085 Phone: 631-691-1800 www.slantfinbaseboard.com

